

# Remote for RF Dimmer


## REMOTE RF WHITE 4Z

# Radium

Date: 09.06.2021

**Important:** Read All Instructions Prior to Installation

### Function introduction

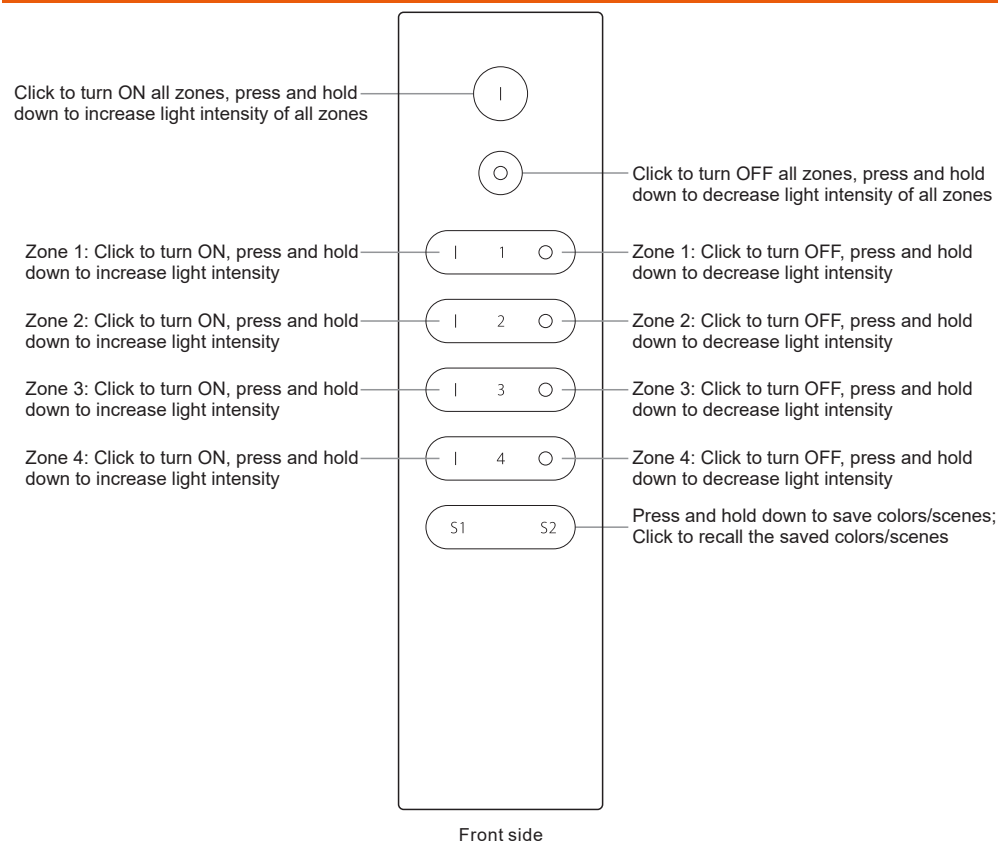


**Note:** Before the first use, please remove the protective film on the battery.

### Product Data

|                       |                      |
|-----------------------|----------------------|
| Output                | RF signal            |
| Operation Frequency   | 869.5/916.5/434MHz   |
| Power Supply          | 3V(1xCR2032 battery) |
| Operating temperature | 0-40°C               |
| Relative humidity     | 8% to 80%            |
| Dimensions            | 150x38.6x12mm        |

- Control 4 zones of dimmer separately
- Single color dimmer
- Compatible with all universal series RF dimmers
- 1 dimmer can be paired by max 8 different remote controls.
- Waterproof grade: IP20

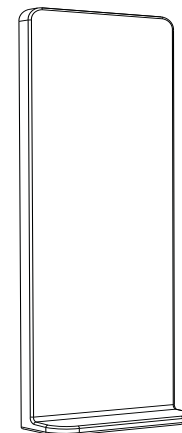


Magnetic Bracket

### Safety & Warnings

- This device contains a button lithium battery that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

### Pair with RF Dimmer

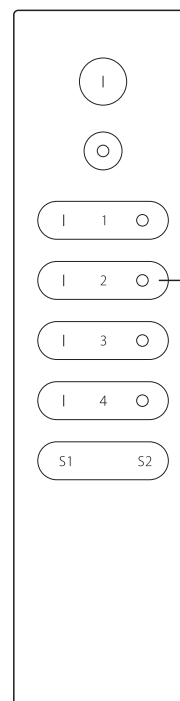

**Step 1:** Do wiring the RF dimmer according to wiring diagram (please refer to the instruction of RF dimmer that you would like to pair with).



**Step 2:** Click the "Learning Key" button on RF dimmer or re-power on the dimmer three times continuously to set it into pairing status.

**Step 3:** Choose one zone and click I or O of the zone (e.g. zone 2), LED lights connected with the RF dimmer flicker once means the dimmer is paired with zone 2 successfully.

**Note:** one dimmer can be paired with max. 8 remote controls.

**If you use multiple dimmers, you have two choices:**

- Option 1: have all the dimmers in the same zone, like zone 1
- Option 2: have all the dimmers in different zones, like zone 1, zone 2, zone 3 and zone 4

