
High pressure sodium lamp RNP-E/LR 400W/S/230/E40



Product Datasheet Date: 05.11.2025





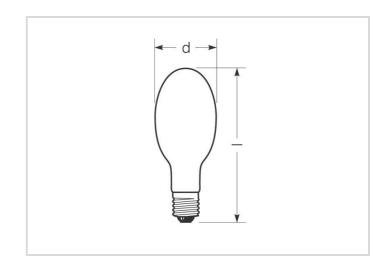











Ε

55400

2000K 36 000h

Dimmbar

General Data

| Artikel Nr. | 34418955 |
|-------------------------------------|-------------------------|
| Bestellzeichen | RNP-E/LR 400W/S/230/E40 |
| EAN-Faltschachtel | 4008597189555 |
| Versandeinheit in Stk. | 12 |
| EAN Umkarton (Versandeinheit) | 4008597489556 |
| Brutto-Gewicht Versandeinheit in kg | 4.119 |
| Länge Versandeinheit in m | 0.54 |
| Breite Versandeinheit in m | 0.42 |
| Höhe Versandeinheit in m | 0.32 |
| Product weight | 234 g |
| Produktstatus | Inaktiv |

Electric Parameters

| Wattage | 410.0 W |
|---|---------|
| Lamp nominal wattage | 400 W |
| Weighted energy consumption in 1000 hours | 410 kWh |
| Lamp voltage | 105 V |
| Mains voltage | 230 V |

High pressure sodium lamp RNP-E/LR 400W/S/230/E40



Electric Parameters

| Ignition voltage | 3.3 up to 5.0 | |
|---|--|--|
| Lamp's nominal current | 4. A | |
| Nominal choke current | 4.6 A | |
| Compensation capacitor for 50Hz operation | 45 μF | |
| Fuse | Daelay-action; min. double nominal current | |
| dimmable | Ja | |

Light Application Parameters

| Luminous flux | 55400 lm |
|-----------------------------|----------|
| Rated lamp luminous flux | 55400 lm |
| Efficacy | 137 lm/W |
| Total mains efficacy | 135 lm/W |
| Colour temperature | 2000 K |
| Color coordinate X | 0,535 |
| Color coordinate Y | 0.420 |
| Color rendering index | 25 |
| Lumen maintenance at 2000h | 0.98 |
| Lumen maintenance at 4000h | 0.97 |
| Lumen maintenance at 6000h | 0.96 |
| Lumen maintenance at 8000h | 0.95 |
| Lumen maintenance at 12000h | 0.94 |
| Lumen maintenance at 16000h | 0.94 |
| Lumen maintenance at 20000h | 0.94 |

Service Life

| Average life | 36000 h |
|---------------------------------|---------|
| B5 - Service life 5% failures | 20000 h |
| B10 - Service life 10% failures | 24000 h |
| Lamp survival factor at 2000h | 0.99 |
| Lamp survival factor at 4000h | 0.99 |
| Lamp survival factor at 6000h | 0.98 |
| Lamp survival factor at 8000h | 0.98 |
| Lamp survival factor at 12000h | 0.97 |
| Lamp survival factor at 16000h | 0.96 |
| Lamp survival factor at 20000h | 0.96 |
| | |

High pressure sodium lamp

RNP-E/LR 400W/S/230/E40



Specification

| Energylabel (G -> A) | E |
|------------------------|-----------|
| Energylabel (E -> A++) | A++ |
| Diameter | 122 mm |
| Length | 290 mm |
| Total length max. | 290 mm |
| Burning position | h180 |
| Mercury content | 24.0 mg |
| Lamp shape | Ellipsoid |
| Model | Opal |
| Base | E40 |

Notes on Operation

| Burning position | h180 | |
|------------------|------|--|

Information especially for EPREL

| EPREL ID number | 873971 | |
|-----------------|--------|--|

Miscellaneous

| EU Directive | TIM |
|------------------|--------------------|
| Similar products | 32417733, 34414856 |

Notes

High pressure sodium lamp long run (4Y), elliptical bulb coated, base E40. Operation with ballast and ignitor.

Please, refer to www.radium.de/recycling for notes on disposal of burned-out lamps as well as lamp breakage.

The "lifespan L70" described for LED lamps indicates the number of hours when the luminous flux has decreased to 70% of its initial value.

The optinal field 'info about service life' contains the frame conditions according to standards based on which the specific service life has been

determined. So, for example, "12B50, 50Hz" means that the mean service life (B50) has been determined with a 12h switching cycle at mains (frequency 50Hz), "3B50, HF" is based on a 3h switching cycle at electronic control gear (high frequency).

Sockelübersicht



E40 IEC/EN 60061-1 sheet 7004-24-6

Spektrale Strahlungsverteilung

Natural daylight is a mixture of direct sunlight and the light of the sky. Therefore, its spectral composition changes permanently due to the changing time of day. The standardised light classification D65 corresponds to a daylight with a colour temperature of approximately 6500 K. Every discharge lamp type has got an individual spectral power distribution according to its chemical filling. From this result important properties light colour or colour rendering. Sodium vapour lamps are very economic, due to the yellow light RNP lamps have got a high luminous efficiency but only


High pressure sodium lamp

RNP-E/LR 400W/S/230/E40




modest colour rendering.

After the lamp start a high pressure sodium lamp needs about 6-10 minutes time to reach its full luminous flux. Visible region from 380 to 780 nm; height of graph corresponding with relative spectral emission (400mW/klm)per 10nm.

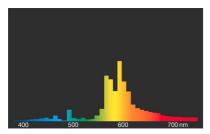


RNP Standard/Super

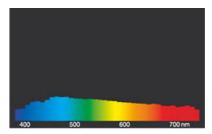

daylight(D 65)

Schaltbeispiel(e)



Standard circuit HID with external ignitor

Key:

L. = lamp

VG = electromagnetic ballast (KVG/VVG)


P = phase

N = zero potential

K = p. f. correction capacitor

Z = ignitor

The required control gear (here ignitor and ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.



ECG-operation

Key:

L. = lamp


EVG = electronic ballast

P = phase

N = zero potential

The required control gear (here electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified

and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.



ECG-operation

Key:

L. = lamp


EVG = electronic ballast

P = phase

N = zero potential

The required control gear (here electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified

and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.



ECG-operation

Key:

L. = lamp

EVG = electronic ballast

P = phase

N = zero potential


The required control gear (here electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified

and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

High pressure sodium lamp

RNP-E/LR 400W/S/230/E40





ECG-operation with additional ignitor

Key:

L. = lam

EVG = electronic ballast

P = phase

N = zero potential

Z = ignitor

The required control gear (here ignitor and electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

Besonderheiten





Allgemeine Hinweise

The technical design data in accordance with DIN and IEC. The producer does not take any responsibility for damage to persons or property in case of unsuitable operation or handling of the product. Operating data and dimensions are valid within the usual tolerances. Related lamp types (different bases, mains voltages) may be available on request. Sale and delivery are effected in accordance with the Radium Terms of Delivery and Payment valid on the day of conclusion of contract. Packing units offer economical advantages to the purchase and logistic department. Please match your quantity volume accordingly. For orders of a minimum quantity (clefts) with a lamp model the amount lower than the volume of each packaging unit, we will invoice 10 % additional charge per lamp type. Technical changes and terms of delivery are reserved. Manipulation of any kind to packaging or product is not permissible as this will violate Radium brand rights. Furthermore, technical properties of the product can change to its disadvantage or even destruction. Therefore, Radium cannot be responsible for consequential damages.

® = Registered trademark

Subject to change without notice. Errors and omissions excepted.

All technical data without guarantee.