


# Metal halide lamp with quartz burner

HRI-TS 150W/NDL/230/XLN/RX7S

Radium

Product Datasheet Date: 05.11.2025

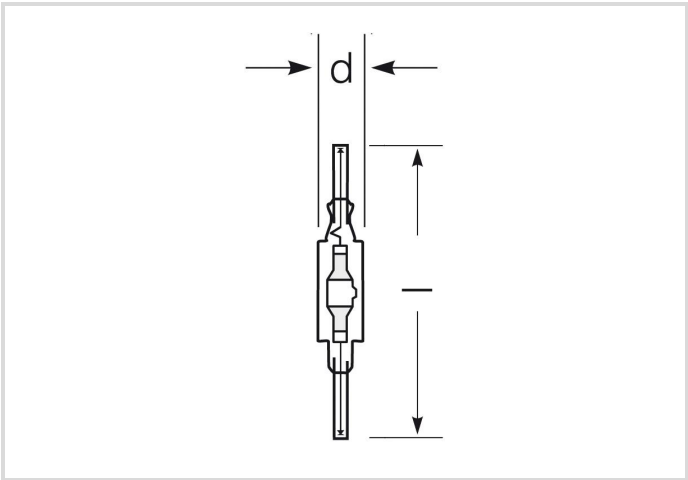

A

G

12500

4200K

12 000h

## General Data

|                                       |                               |
|---------------------------------------|-------------------------------|
| Artikel Nr.                           | 32418876                      |
| Bestellzeichen                        | HRI-TS 150W/NDL/230/XLN/RX7S  |
| EAN-Faltschachtel                     | 4008597188763                 |
| Versandereinheit in Stk.              | 12                            |
| EAN Umkarton (Versandereinheit)       | 4008597488764                 |
| Brutto-Gewicht Versandereinheit in kg | 0.48                          |
| Länge Versandereinheit in m           | 0.147                         |
| Breite Versandereinheit in m          | 0.114                         |
| Höhe Versandereinheit in m            | 0.153                         |
| Product weight                        | 22 g                          |
| Produktstatus                         | <div><div></div>Inaktiv</div> |

## Electric Parameters

|                                           |               |
|-------------------------------------------|---------------|
| Wattage                                   | 150.0 W       |
| Lamp nominal wattage                      | 150 W         |
| Weighted energy consumption in 1000 hours | 165 kWh       |
| Mains voltage                             | 230 V         |
| Ignition voltage                          | 4.0 up to 5.0 |

Electric Parameters

|                                           |       |
|-------------------------------------------|-------|
| Hot restrike voltage                      | 35 kV |
| Lamp's nominal current                    | 1.8 A |
| Nominal choke current                     | 1.8 A |
| Compensation capacitor for 50Hz operation | 20 µF |
| dimmable                                  | Nein  |

Light Application Parameters

|                             |            |
|-----------------------------|------------|
| Luminous flux               | 12500 lm   |
| Rated lamp luminous flux    | 12500 lm   |
| Efficacy                    | 83.33 lm/W |
| Total mains efficacy        | 84 lm/W    |
| Colour temperature          | 4200 K     |
| Color rendering index       | 80         |
| Lumen maintenance at 2000h  | 0.86       |
| Lumen maintenance at 4000h  | 0.84       |
| Lumen maintenance at 6000h  | 0.80       |
| Lumen maintenance at 8000h  | 0.77       |
| Lumen maintenance at 12000h | 0.73       |

Service Life

|                                |         |
|--------------------------------|---------|
| Average life                   | 12000 h |
| Lamp survival factor at 2000h  | 0.95    |
| Lamp survival factor at 4000h  | 0.90    |
| Lamp survival factor at 6000h  | 0.85    |
| Lamp survival factor at 8000h  | 0.80    |
| Lamp survival factor at 12000h | 0.50    |

Specification

|                        |         |
|------------------------|---------|
| Energylabel (G -> A)   | G       |
| Energylabel (E -> A++) | A       |
| Diameter               | 23 mm   |
| Length                 | 135 mm  |
| Total length max.      | 135 mm  |
| Contact distance I     | 132 mm  |
| Burning position       | p45     |
| Mercury content        | 12.3 mg |

Specification

|            |                    |
|------------|--------------------|
| Lamp shape | Tube, double-ended |
| Model      | Clear              |
| Base       | RX7s-24            |
| Colour     | White              |

Notes on Operation

|                  |     |
|------------------|-----|
| Burning position | p45 |
|------------------|-----|

Information especially for EPREL

|                 |        |
|-----------------|--------|
| EPREL ID number | 868735 |
|-----------------|--------|

Miscellaneous

|                  |                              |
|------------------|------------------------------|
| EU Directive     | TIM                          |
| Similar products | 32419665, 32419475, 32420042 |

Notes

Compact MH lamp with quartz burner, tubular bulb clear, light colour NDL, base RX7s. Operation in enclosed luminaire, with ballast and ignitor.

Please, refer to [www.radium.de/recycling](http://www.radium.de/recycling) for notes on disposal of burned-out lamps as well as lamp breakage.

The "lifespan L70" described for LED lamps indicates the number of hours when the luminous flux has decreased to 70% of its initial value.

The optimal field 'info about service life' contains the frame conditions according to standards based on which the specific service life has been determined. So, for example, "12B50, 50Hz" means that the mean service life (B50) has been determined with a 12h switching cycle at mains (frequency 50Hz), "3B50, HF" is based on a 3h switching cycle at electronic control gear (high frequency).

Socketübersicht



RX7s  
IEC/EN 60061-1  
sheet 7004-92A-4

Spektrale Strahlungsverteilung

Natural daylight is a mixture of direct sunlight and the light of the sky. Therefore, its spectral composition changes permanently due to the changing time of day. The standardised light classification D65 corresponds to a daylight with a colour temperature of approximately 6500 K.

Every discharge lamp type has got an individual spectral power distribution according to its chemical filling. From this result important properties light colour or colour rendering.

Should the spectral lines be very close together the lamp presumably has got a very good colour rendering index, so, Ra might be near 100. Does the spectrum rather look like single lines or frayed out the colour rendering of the lamp will probably be not as good.

If number and height of the spectral lines within the blue range (around 400 nm) prevails it might be a lamp with a rather cold light colour like for example daylight. On the other hand, should the red (around 700 nm) or the red and yellow (around 600 nm) range be dominant one can assume that the lamp will be a rather warm light colour like WDL.


After the lamp start a metal hlide lamp needs about 2-4 minutes time to reach its full luminous flux, all colours in the spectrum are within the discharge arc then.

Visible region from 380 to 780 nm; height of graph corresponding with relative spectral emission (400mW/klm) per 10nm.


# Metal halide lamp with quartz burner

HRI-TS 150W/NDL/230/XLN/RX7S

**Radium**

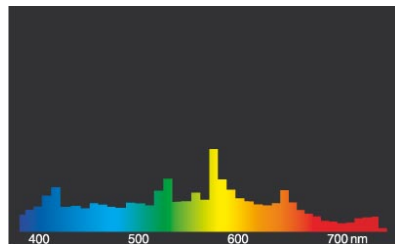


HRI.../NDL

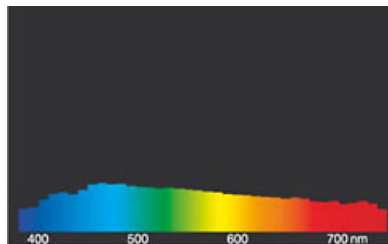

daylight(D 65)

## Schaltbeispiel(e)

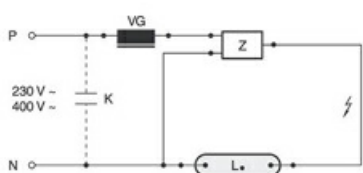

Standard circuit HID with external ignitor

Key:

L. = lamp

VG = electromagnetic ballast (KVG/VVG)


P = phase

N = zero potential

K = p. f. correction capacitor

Z = ignitor

The required control gear (here ignitor and ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

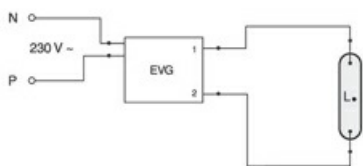

ECG-operation

Key:


L. = lamp

EVG = electronic ballast

P = phase

N = zero potential

The required control gear (here electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

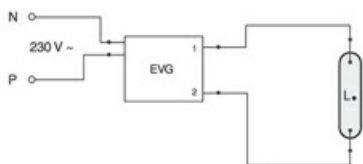

ECG-operation

Key:


L. = lamp

EVG = electronic ballast

P = phase

N = zero potential

The required control gear (here electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

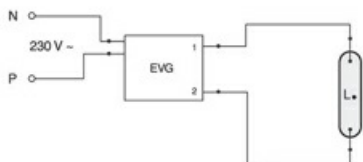

ECG-operation

Key:


L. = lamp

EVG = electronic ballast

P = phase

N = zero potential

The required control gear (here electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

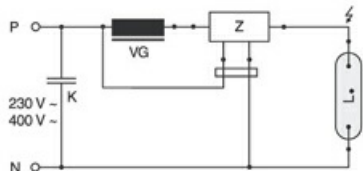

Circuit for 230V-HID-lamps suitable for hot restrike

Key:

L. = lamp

VG = electromagnetic ballast (KVG/VVG)

P = phase

N = zero potential

K = p. f. correction capacitor


Z = ignitor

# Metal halide lamp with quartz burner

HRI-TS 150W/NDL/230/XLN/RX7S

**Radium**

The required control gear (here ignitor and ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

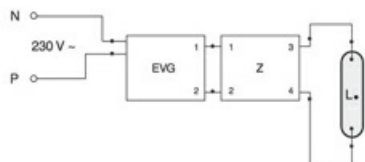

ECG-operation with additional ignitor

Key:

L. = lamp

EVG = electronic ballast

P = phase

N = zero potential

Z = ignitor

The required control gear (here ignitor and electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

## Besonderheiten



## Allgemeine Hinweise

The technical design data in accordance with DIN and IEC. The producer does not take any responsibility for damage to persons or property in case of unsuitable operation or handling of the product. Operating data and dimensions are valid within the usual tolerances. Related lamp types (different bases, mains voltages) may be available on request. Sale and delivery are effected in accordance with the Radium Terms of Delivery and Payment valid on the day of conclusion of contract. Packing units offer economical advantages to the purchase and logistic department. Please match your quantity volume accordingly. For orders of a minimum quantity (clefts) with a lamp model the amount lower than the volume of each packaging unit, we will invoice 10 % additional charge per lamp type. Technical changes and terms of delivery are reserved. Manipulation of any kind to packaging or product is not permissible as this will violate Radium brand rights. Furthermore, technical properties of the product can change to its disadvantage or even destruction. Therefore, Radium cannot be responsible for consequential damages.

® = Registered trademark

Subject to change without notice. Errors and omissions excepted.

All technical data without guarantee.