
High pressure sodium lamp RNP-T 70W/230/E27 EX



Product Datasheet Date: 05.11.2025





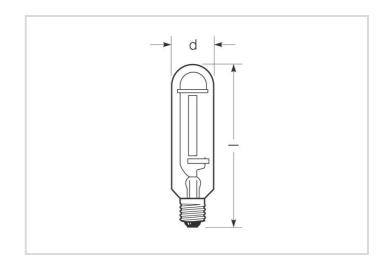







6000

2000K

20 000h

General Data

Artikel Nr.	34416634
Bestellzeichen	RNP-T 70W/230/E27 EX
EAN-Faltschachtel	4008597166341
Versandeinheit in Stk.	12
EAN Umkarton (Versandeinheit)	4008597466342
Brutto-Gewicht Versandeinheit in kg	1.07
Länge Versandeinheit in m	0.23
Breite Versandeinheit in m	0.19
Höhe Versandeinheit in m	0.22
Product weight	70 g
Produktstatus	Aktiv

Electric Parameters

Wattage	70.0 W
Lamp nominal wattage	70 W
Lamp voltage	90 V
Mains voltage	230 V
Ignition voltage	4.0 up to 5.0

RNP-T 70W/230/E27 EX



Electric Parameters

Nominal current (A)	0.98 A	
Nominal choke current	1 A	
Compensation capacitor for 50Hz operation	12 µF	
Running up current max.	125%	
Fuse	Daelay-action; min. double nominal current	
Controllable (in suitable circuit)	up to 50% (Run up at nominal power)	

Light Application Parameters

Luminous flux	6000 lm
Rated lamp luminous flux	6000 lm
Efficacy	83 lm/W
Total mains efficacy	77 lm/W
Colour temperature	1900 K
Color rendering index	25
Lumen maintenance at 2000h	0.92
Lumen maintenance at 4000h	0.86
Lumen maintenance at 6000h	0.83
Lumen maintenance at 8000h	0.82
Lumen maintenance at 12000h	0.81
Lumen maintenance at 16000h	0.81
Lumen maintenance at 20000h	0.80

Service Life

Average life	20000 h	
B5 - Service life 5% failures	8000 h	
B10 - Service life 10% failures	11000 h	
Lamp survival factor at 2000h	0.99	
Lamp survival factor at 4000h	0.98	
Lamp survival factor at 6000h	0.95	
Lamp survival factor at 8000h	0.90	
Lamp survival factor at 12000h	0.87	
Lamp survival factor at 16000h	0.74	
Lamp survival factor at 20000h	0.50	

RNP-T 70W/230/E27 EX



Specification

Energylabel notice	old label, no EPREL registration, no EU data sheet
Energylabel (E -> A++)	A+
Diameter	38 mm
Length	156 mm
Total length max.	156 mm
Burning position	h180
Mercury content	19.0 mg
Lamp shape	Tube, single-ended
Model	Clear
Base	E27

Notes on Operation

Burning position	h180	

Information especially for EPREL

Energylabel notice	old label, no EPREL registration, no EU data sheet

Miscellaneous

EU-date of phase-out	13.04.2012
EU Directive	TIM

Notes

Standard high-pressure sodium lamp, clear tubular bulb, E27 base, for sale outside the EU, without CE mark.

Please, refer to www.radium.de/recycling for notes on disposal of burned-out lamps as well as lamp breakage.

The "life and 1.70" decay is a few to a decay as the sure when the luminous flux has decay as the sure of the lamp and the sure of the sur

The "lifespan L70" described for LED lamps indicates the number of hours when the luminous flux has decreased to 70% of its initial value. The optimal field 'info about service life' contains the frame conditions according to standards based on which the specific service life has been determined. So, for example, "12B50, 50Hz" means that the mean service life (B50) has been determined with a 12h switching cycle at mains (frequency 50Hz), "3B50, HF" is based on a 3h switching cycle at electronic control gear (high frequency).

Sockelübersicht



E27 IEC/EN 60061-1 sheet 7004-21-9

Spektrale Strahlungsverteilung


Natural daylight is a mixture of direct sunlight and the light of the sky. Therefore, its spectral composition changes permanently due to the changing time of day. The standardised light classification D65 corresponds to a daylight with a colour temperature of approximately 6500 K. Every discharge lamp type has got an individual spectral power distribution according to its chemical filling. From this result important properties light colour or colour rendering. Sodium vapour lamps are very economic, due to the yellow light RNP lamps have got a high luminous efficiency but only

RNP-T 70W/230/E27 EX




modest colour rendering.


After the lamp start a high pressure sodium lamp needs about 6-10 minutes time to reach its full luminous flux. Visible region from 380 to 780 nm; height of graph corresponding with relative spectral emission (400mW/klm)per 10nm.

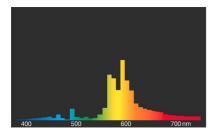

RNP Standard/Super

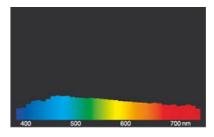

Schaltbeispiel(e)



Standard circuit HID with external ignitor

Key:

L. = lamp

VG = electromagnetic ballast (KVG/VVG)


P = phase

N = zero potential

K = p. f. correction capacitor

Z = ignitor

The required control gear (here ignitor and ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.



ECG-operation

Key:

L. = lamp


EVG = electronic ballast

P = phase

N = zero potential

The required control gear (here electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified

and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.



ECG-operation

Key:

L. = lamp


EVG = electronic ballast

P = phase

N = zero potential

The required control gear (here electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified

and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.



ECG-operation

Key:

L. = lamp

EVG = electronic ballast

P = phase


N = zero potential

The required control gear (here electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified

and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

RNP-T 70W/230/E27 EX





ECG-operation with additional ignitor

Key:

L. = lamp

EVG = electronic ballast

P = phase

N = zero potential

Z = ignitor

The required control gear (here ignitor and electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

Besonderheiten







Allgemeine Hinweise

The technical design data in accordance with DIN and IEC. The producer does not take any responsibility for damage to persons or property in case of unsuitable operation or handling of the product. Operating data and dimensions are valid within the usual tolerances. Related lamp types (different bases, mains voltages) may be available on request. Sale and delivery are effected in accordance with the Radium Terms of Delivery and Payment valid on the day of conclusion of contract. Packing units offer economical advantages to the purchase and logistic department. Please match your quantity volume accordingly. For orders of a minimum quantity (clefts) with a lamp model the amount lower than the volume of each packaging unit, we will invoice 10 % additional charge per lamp type. Technical changes and terms of delivery are reserved. Manipulation of any kind to packaging or product is not permissible as this will violate Radium brand rights. Furthermore, technical properties of the product can change to its disadvantage or even destruction. Therefore, Radium cannot be responsible for consequential damages.

® = Registered trademark

Subject to change without notice. Errors and omissions excepted.

All technical data without guarantee.