
# **High pressure sodium lamp** RNP-T 400W/230/E40 EX



Product Datasheet Date: 03.12.2025





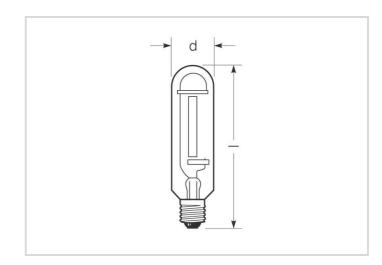







48000

2000K

20 000h

#### **General Data**

Article No.	34422204
Kod	RNP-T 400W/230/E40 EX
Product EAN	4008597222047
Box quantitiy (pcs.)	12
EAN Box	4008597422041
Gross weight of box in kg	2.86
Length of box in m	0.27
Width of box in m	0.22
Height of box in m	0.36
Product weight	173 g
Product status	Nieaktywne

## **Electric Parameters**

Wattage	392.0 W
Lamp nominal wattage	400 W
Lamp voltage	105 V
Mains voltage	230 V
Ignition voltage	4.0 up to 5.0

RNP-T 400W/230/E40 EX



## **Electric Parameters**

Nominal current (A)	4.6 A
Nominal choke current	4.6 A
Compensation capacitor for 50Hz operation	45 μF
Running up current max.	125%
Fuse	Daelay-action; min. double nominal current
Controllable (in suitable circuit)	up to 50% (Run up at nominal power)

## **Light Application Parameters**

Luminous flux	48000 lm	
Rated lamp luminous flux	48000 lm	
Efficacy	120 lm/W	
Total mains efficacy	111 lm/W	
Colour temperature	2000 K	
Color rendering index	25	
Lumen maintenance at 2000h	0.97	
Lumen maintenance at 4000h	0.96	
Lumen maintenance at 6000h	0.95	
Lumen maintenance at 8000h	0.94	
Lumen maintenance at 12000h	0.92	
Lumen maintenance at 16000h	0.91	
Lumen maintenance at 20000h	0.89	•

#### **Service Life**

Average life	20000 h	
B5 - Service life 5% failures	8000 h	
B10 - Service life 10% failures	11000 h	
Lamp survival factor at 2000h	0.99	
Lamp survival factor at 4000h	0.98	
Lamp survival factor at 6000h	0.95	
Lamp survival factor at 8000h	0.90	
Lamp survival factor at 12000h	0.87	
Lamp survival factor at 16000h	0.74	
Lamp survival factor at 20000h	0.50	

RNP-T 400W/230/E40 EX



## **Specification**

Energylabel notice	old label, no EPREL registration, no EU data sheet
Energylabel (E -> A++)	A+
Diameter	47 mm
Length	285 mm
Total length max.	285 mm
Burning position	h180
Mercury content	19.9 mg
Lamp shape	Tube, single-ended
Model	Clear
Base	E40

#### **Notes on Operation**

Burning position	h180	

#### Information especially for EPREL

Energylabel notice old label, no EPREL registration, no EU data sheet		
	Energylabel notice	old label, no EPREL registration, no EU data sheet

#### **Miscellaneous**

EU-date of phase-out	13.04.2012
EU Directive	TIM

#### **Notes**

Standard high pressure sodium lamp, tubular bulb clear, base E40, for sales outside EU, without CE-marking.

Please, refer to <a href="www.radium.de/recycling">www.radium.de/recycling</a> for notes on disposal of burned-out lamps as well as lamp breakage.

The "lifespan L70" described for LED lamps indicates the number of hours when the luminous flux has decreased

The "lifespan L70" described for LED lamps indicates the number of hours when the luminous flux has decreased to 70% of its initial value. The optinal field 'info about service life' contains the frame conditions according to standards based on which the specific service life has been determined. So, for example, "12B50, 50Hz" means that the mean service life (B50) has been determined with a 12h switching cycle at mains (frequency 50Hz), "3B50, HF" is based on a 3h switching cycle at electronic control gear (high frequency).

#### Base




E40 IEC/EN 60061-1 sheet 7004-24-6


Spectrum

## RNP-T 400W/230/E40 EX



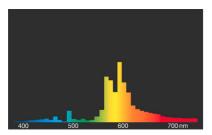


RNP Standard/Super

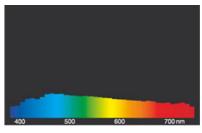

daylight(D 65)

#### Circuit diagram(s)

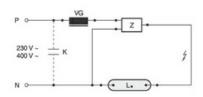

Standard circuit HID with external ignitor

Key:

L. = lamp

VG = electromagnetic ballast (KVG/VVG)


P = phase

N = zero potential

K = p. f. correction capacitor

Z = ignitor

The required control gear (here ignitor and ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

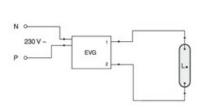

**ECG-operation** 

Key:

L. = lamp


EVG = electronic ballast

P = phase

N = zero potential

The required control gear (here electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified

and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

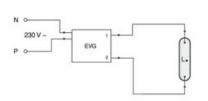

ECG-operation

Key:

L. = lamp


EVG = electronic ballast

P = phase

N = zero potential

The required control gear (here electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified

and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

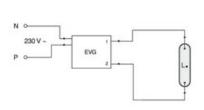

**ECG-operation** 

Key:

L. = lamp


EVG = electronic ballast

P = phase

N = zero potential

The required control gear (here electronic ballast) for the lamps operation is usually mounted in the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified

and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

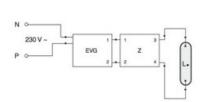

ECG-operation with additional ignitor

Key:

L. = lamp

EVG = electronic ballast

P = phase

N = zero potential

Z = ignitor

The required control gear (here ignitor and electronic ballast) for the lamps operation is usually mounted in

RNP-T 400W/230/E40 EX



the suitable luminaire in an appropriate electric circuit. Changes of any kind are to be conducted by qualified and specialised staff, only. Thus, this circuit example is to be understood merely as a technical background information for interested users.

#### Special features







#### General notes

The technical design data in accordance with DIN and IEC. The producer does not take any responsibility for damage to persons or property in case of unsuitable operation or handling of the product. Operating data and dimensions are valid within the usual tolerances. Related lamp types (different bases, mains voltages) may be available on request. Sale and delivery are effected in accordance with the Radium Terms of Delivery and Payment valid on the day of conclusion of contract. Packing units offer economical advantages to the purchase and logistic department. Please match your quantity volume accordingly. For orders of a minimum quantity (clefts) with a lamp model the amount lower than the volume of each packaging unit, we will invoice 10 % additional charge per lamp type. Technical changes and terms of delivery are reserved. Manipulation of any kind to packaging or product is not permissible as this will violate Radium brand rights. Furthermore, technical properties of the product can change to its disadvantage or even destruction. Therefore, Radium cannot be responsible for consequential damages.

® = Registered trademark

Subject to change without notice. Errors and omissions excepted.

All technical data without guarantee.